

Viking™ 3 terminal blocks with screw connection and accessories

for copper cables

			ELECTRICAL FUNCTION	TERMINAL BLOCKS			INSULATION		EQUIPOTENTIAL LINK			PROTECTION		MEASURE- MENT	ASSOCIATED PRODUCTS								
				Nominal cross-section (mm <sup>2</sup> )	Pitch (mm)	Colour	Cat. Nos	End cap	Separation and insulation divider	Automatic insertion birdging comb			Single pole screen	Cut to length screen		Test socket							
									2 red blocks	10 red blocks	10 blue blocks	Comb for 12 blocks, side	Bar for 12 blocks, front										
	Connecting (p. 328)	1 connection - 1 entry/1 outlet			2.5	5	0 371 60 0 371 00 0 371 20 0 371 30	0 375 50 <sup>(2)</sup>	0 375 60	0 375 02	0 375 01	0 375 00			0 375 65	0 375 68	0 375 27 <sup>(7)</sup>	 End stops (p. 332)					
					4	6	0 371 61 0 371 01 0 371 21 0 371 31 0 371 77	0 375 50 <sup>(2)</sup>	0 375 60	0 375 05	0 375 04	0 375 03					0 375 65		0 375 68	0 375 27 <sup>(7)</sup>			
					6	8	0 371 62 0 371 02 0 371 78	0 375 50 <sup>(2)</sup>	0 375 60	0 375 07 <sup>(6)</sup> 0 375 08 <sup>(6)</sup>							0 375 66		0 375 68	0 375 27			
					10	10	0 371 63 0 371 03	0 375 50 <sup>(2)</sup>	0 375 60								0 375 40		0 375 66	0 375 68	0 375 75	 Label holder for end stop (p. 332)	
					16	12	0 371 64 0 371 04 0 371 98	0 375 51	0 375 61								0 375 42		0 375 67	0 375 69	0 375 76		
					35	15	0 371 65 0 371 05 0 371 99	0 375 51	0 375 61								0 375 44		0 375 67	0 375 69	0 375 76		
					70	22	0 371 66	built-in															
					4	6	0 371 69 0 371 09	0 375 52	0 375 62	0 375 05	0 375 04	0 375 03										0 375 27 <sup>(7)</sup>	 Handle lever mini lever (p. 333)
					2.5	5	0 371 67 0 371 07	0 375 53	0 375 63	0 375 02	0 375 01	0 375 00										0 375 27 <sup>(3)(7)</sup>	
					4	6	0 371 68 0 371 08	0 375 53	0 375 63	0 375 05	0 375 04	0 375 03										0 375 27 <sup>(3)(7)</sup>	
2.5	5	0 371 51	0 375 54	0 375 54	0 375 02 <sup>(3)</sup>	0 375 01 <sup>(3)</sup>	0 375 00 <sup>(3)</sup>	0 375 46 <sup>(5)</sup> 0 375 47 <sup>(5)</sup>								0 375 27 <sup>(3)(7)</sup>	 Joining rods for disconnect blocks (p. 333)						
4	6	0 371 79	0 375 52																				
	For protection conductor (p. 328)	1 connection - 1 entry/1 outlet - metal base			2.5	5	0 371 70	0 375 50 <sup>(2)</sup>															
		4			6	0 371 71																	
6	8	0 371 72	0 375 51																				
10	10	0 371 73																					
16	12	0 371 74	0 375 51																				
35	15	0 371 75																					
35	15	0 371 76																					
4	6	0 371 79	0 375 52																				
	Disconnect (p. 329)	1 connection			Open (to be equipped)		0 371 80	0 375 55	0 375 62	0 375 05	0 375 04	0 375 03					0 375 27 <sup>(7)</sup>	 Blown fuse indicators (p. 333)					
					For fuse cartridge 5 x 20 with handle lever		0 371 81	0 375 55	0 375 62	0 375 05	0 375 04	0 375 03											
					For fuse cartridge 5 x 20 with handle lever + blown fuse indicator		0 371 81 + 0 375 24/25 <sup>(1)</sup>																
					For neutral circuit with handle lever		0 371 82	0 375 55	0 375 62	0 375 05	0 375 04	0 375 03											
					For standard circuit With handle lever		0 371 83																
					With mini lever		0 371 84	0 375 55	0 375 62	0 375 05	0 375 04	0 375 03											
					For circuit not broken With handle lever		0 371 85																
With mini lever		0 371 86	0 375 55	0 375 62	0 375 05	0 375 04	0 375 03									0 375 27 <sup>(7)</sup>							
For fuse cartridge 5 x 20 with screwed plug		0 371 87	0 375 56																				
	Function blocks (p. 329)	1 connection			Modular		0 371 53	0 375 55		0 375 02	0 375 01	0 375 00											
					Diode carrier 1N4007		0 371 54																
		2 connections on 2 levels			Diode carrier 1N4007		0 371 55	0 375 53	0 375 63	0 375 05	0 375 04	0 375 03							0 375 27 <sup>(3)(7)</sup>				
					With voltage presence LED		0 371 56	0 375 53	0 375 63	0 375 05 <sup>(4)</sup>	0 375 04 <sup>(4)</sup>	0 375 03 <sup>(4)</sup>											
	For sensor and actuator (p. 329)	3 connections on 3 levels			Sensor		0 371 51	0 375 54	0 375 54	0 375 02 <sup>(3)</sup>	0 375 01 <sup>(3)</sup>	0 375 00 <sup>(3)</sup>	0 375 46 <sup>(5)</sup> 0 375 47 <sup>(5)</sup>										
					Actuator		0 371 52																
					Phase/Neutral/Earth																		
	Measurement (p. 329)	1 connection			Disconnect for measuring circuit		0 371 92	0 375 57											0 375 77				

1: Blown fuse indicator 12/24/48 V ~ Cat.No 0 375 24 or 110/250 V ~ Cat.No 0 375 25 - 2: Or end stop Cat.No 0 375 10 - 3: Upper level only - 4: Lower level only - 5: Lower and intermediate levels

6: Cat.No 0 375 07 for 3 terminal blocks - 7: Permanent measurement: side by side installation of 2 test sockets not possible